Easy guide

DIGITAL VIDEO CAMERA

XT PRO

Preparing for use

- **Parts of the camcorder**

1. USB jack
2. TF card slot
3. LCD touch screen
4. Shutter button
5. Speaker
6. Charging indicator light
7. Busy indicator light
8. Power button
9. Reset
10. AV out jack
11. HDMI output
12. Tripod slot
13. Microphone
14. Lens
15. Water proof case

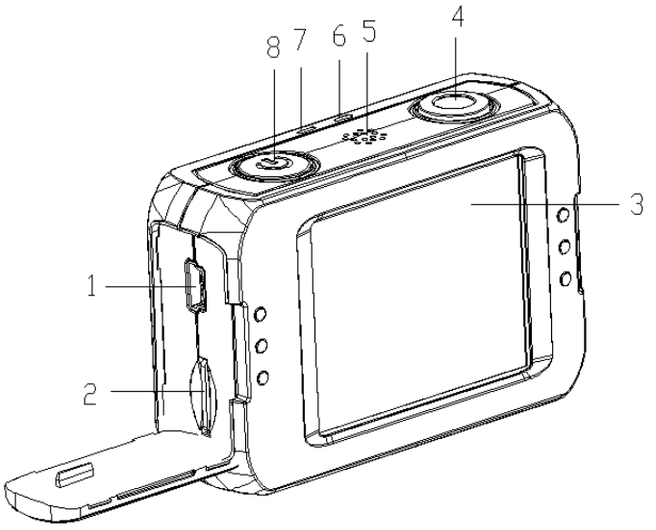

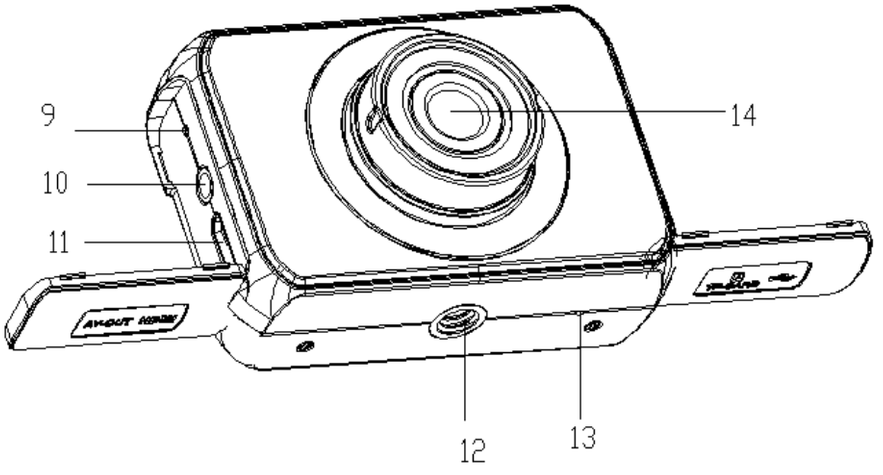

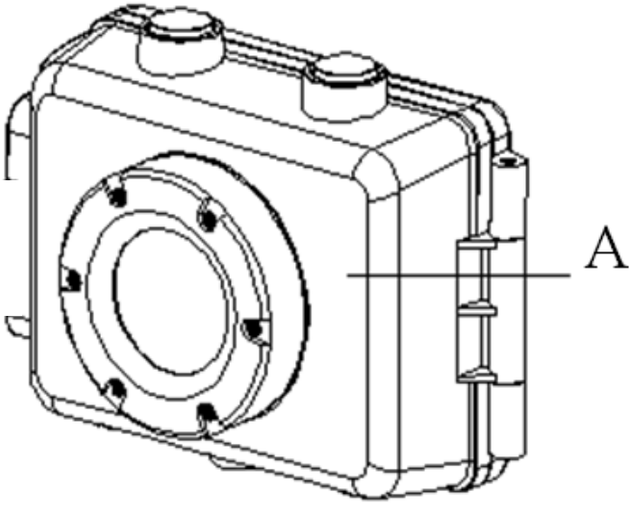

➢ Charging the battery

The camcorder has an internal lithium battery, Please charge the battery for the first time use.

1:Turn off the camcorder.

2:Connect the USB cable to the camcorder and the computer for battery charging.

3:when charging ,the power indicator light will turn red.

4: Once fully charged the charging indictor will disappear.

Then Unplug the USB cable.

The camcorder body may be warm after extended use. This is normal.

➢ Inserting the Memory Card

This camcorder does not equipped with internal memory. An TF card (at least class 4) or multimedia card must be inserted for WXT PRO camcorder to operate. If a card has not been inserted, camcorder can not record.

1:Turn off the camcorder.

2: Open the rubber cover at the side of camcorder .Find the TF card slot, and then insert the TF card .

If the memory card has successfully been inserted, you will hear a clear buzzer.

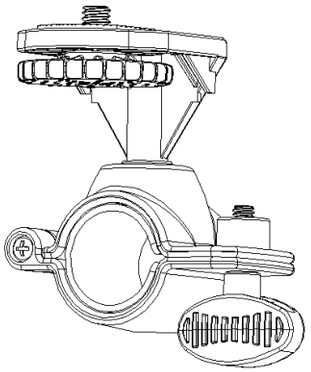

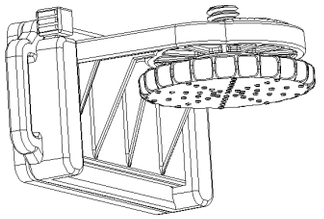

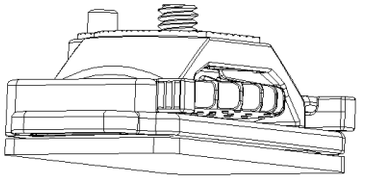

- **Mounts How to fix the WXT PRO camcorder to the bike?**

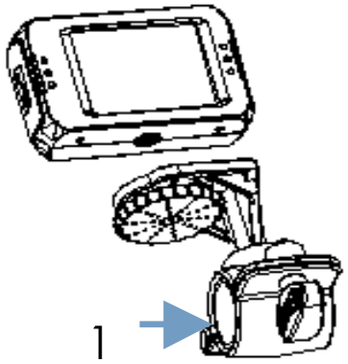

1: Open the round of mount (1), insert the rubber pad(2) into it and fix them to handlebars of bike, then turn the screw to fix it.

2: Fix the metal screw of the mount to the tripod slot of the camcorder respectively, and then wring the thread to fix the mount

3. After fixing it to bike, you can start to take pictures.

- **How to use strap fix to your helmet?**

There are two types: for top and side mount : Insert strap into the two ends of the mount, adjust length according to

helmet's size, and then you can use strap fix to your helmet and start to take pictures.

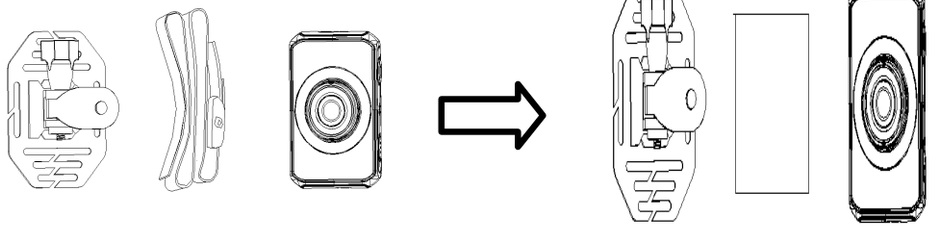

- **How to use sticker fix to your helmet?**

1: Use the side of the paste to the mount, and the other side paste to your helmet and start to take pictures. You can fix it as below

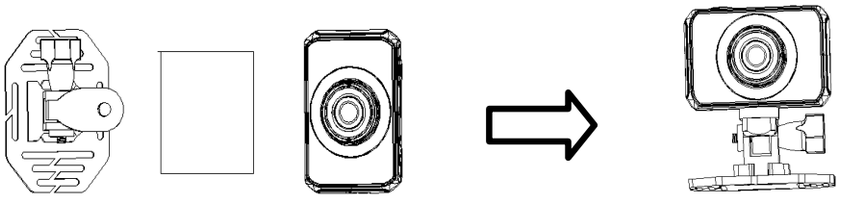

TIPS: Please note that watercase can also be used in the sport camcorder fixed to the bike or the helmet .

Basic operation

- **Turn Power On and Off**

1:Press the POWER button to turn on the camcorder.
2: Press the POWER button again to turn the power off.
Both turn on and turn off the camcorder ,the busy indicator light will turn green.

- **Change the mode of the camcorder**

The LCD screen is touchable, so you can touch it to set most of the options. Current camcorder settings will be displayed on the touchable LCD screen. The camcorder has 3 different modes : capture mode, video mode and playback mode. Touch the icon ( ) on the LCD screen to select between those modes.

Display	Title	Description
	Capture mode	For taking still photos.
	Video mode	For recording movie clips.
	Playback mode	For playing recorded files.

➢ Setting the camcorder

Before taking photographs or recoding videos ,press the power button to switch on the camcorder first. our camcorder has a touch LCD screen, so all the settings are operated by touching the options on the screen. Touch the icon to show the MENU on the screen, touch it and then the icon to bring up the setup menu (Date/ Auto power off / Beep sound/ Language/ Frequency / TV mode/ Format/ Default setting), touch the option you want to

modify, and then you can touch the LEFT to exit and return to the last menu .

Date

[On]/[off]: show or don't show the date and time .

[Set the date]:set the date and time for the camcorder. Touch the option including year, month, date, hour ,minute, second and slide on the screen to select a value you want to modify.

Language

Set the on-screen language.[English] /[French] /[Spanish]/[Portuguese] /[German]/[Dutch]/[Italian]

Auto power off

To save power ,the video camera is turned off automatically after a period of time . After you select the "off " that means the power save function is switched off .[1min]/[3min]/[6min]/[off]

Format .[OK]/ [Cancel]

Format your TF card including protected files, CAUTION: removing the TF card during formatting may damage the card

➢ Recording movie clips

1:Turn on the camcorder and touch the icon to set the camera to video mode .2: Start recording.

Use the LCD screen to view your subject, and touch the to zoom in or zoom out on your subject .

Press the shutter button to start recording.

The LCD monitor will displays how long it has been recording for .

If using a slow card, it will change the size to 720P automatically.

3:Finish recording.

Press the Shutter button again to stop recording.

The camcorder will stop recording automatically when the memory capacity is full.

4: Touch the icon"MENU" to set the option in video mode.(Size/ Exposure/ White balance/ Color/ Loop recording/ Motion detection/ Record audio/ Date stamp)

Exposure

Set the exposure value manually to compensate for unusual lighting conditions. The value varies from -2 to +2.

White balance

Adjust white balance to suit different light sources. There

five items for option:[Auto]/[Daylight]/[Cloudy]/[Fluorescent]/[Incandescent]

Loop recording

Sets the time of the video before recording, when the time is up, it will start another video. When the memory card is full, it will delete the previous recorded files .[off]/ [1minutes]/ [3minutes]/[5minutes]

Motion detection

Using this function means that the camcorder will stop recording automatically when it detect no motion, and when it detect active scene, it will restart recording by itself . [On]/[Off]

Record audio

You can record sound when recording movie clips [On]/[Off]

- **Taking still images**

1:Turn on the camcorder and touch the to set the camera to capture mode .

2: take a still image.

Use the LCD screen to view your subject, and touch the

icon to zoom in or zoom out on your subject.
Press the shutter button to take a still image.
After the image has been taken the LCD will display the image for a brief second.
The memory capacity in the top right of screen will decrease as each image is taken.
3: Touch the icon“MENU” to set the option in capture mode.(Capture mode/ Resolution/ Quality/ Sharpness/ Exposure/ White balance/ Color/ ISO/ Scene mode/ Anti-shake/ Continue shot)

Capture mode

Use this function to set a delay from the time the shutter button is pressed to the time the image is shot.[Single]/[2s timer]/ [5s timer]/[10s timer]

Continue shot

Use this function to take 6 pictures continuously.[On]/[Off]

- **Playback and delete**

1: Turn on the camcorder and touch the icon to set the camera to playback mode.
2: Touch the screen right and left to view the photos and video files .

3: press the **shutter** button or touch the icon to start playing the video file, then it will appears another icon , touch it or press the **shutter** button can have a pause. Repeating this move can play or pause it again. At last, you can touch the icon to stop playing the video file.

4: When viewing the images, you can touch the icon to zoom in or zoom out it. In the situation of zooming in the image , you can touch and move on the screen to see details of the image .but you cannot use the menu any more, unless zoom out it to the original size.

5: Touch the icon“MENU” to set the option in playback mode.(Delete/ Rotate/ Protect/ Pictbridge)

Delete

Use this function to delete a single file or all files.[Delete Current Image]/[Delete All Images]/[Cancel]

Making connections

➢ Connecting the Camcorder to a TV

When plug in the TV-out cable (supplied) to the camcorder AV out jack , the LCD screen turns black, Connect the camcorder to a TV and the TV screen now performs as the camcorder LCD screen.

1、Connect the camcorder to a TV via the AV cable (supplied) 。

2、Turn on the TV and the camcorder, and then set the TV to "AV" mode.

3、When the camcorder is set to record mode, you can preview the subjects you want to record on the TV screen.

4、When the camcorder is set to Playback mode, you can review all the pictures, video clips stored in the camera on the TV.

➢ Connecting the Camcorder to a HDTV

1. Connect the camcorder to HDTV output via HDMI-cable (optional).
2. Turn on HDTV and switch to HDMI-mode.

3. Turn on the camcorder. Set the camcorder in playback mode. Select the desired file by touching the option on the screen.
4. It will appear the next menu on the TV.

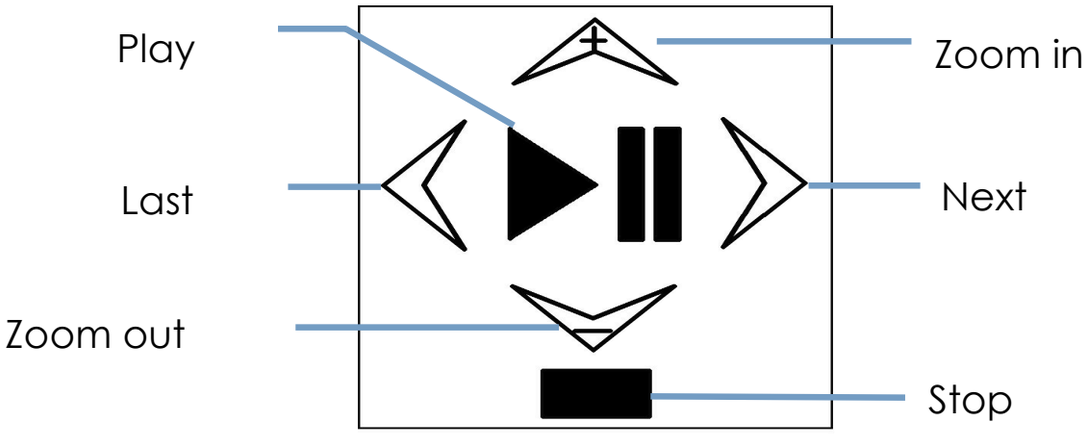

➢ Connecting the Camcorder to a PC

There are two ways to download files from the camcorder's internal memory or memory card to a computer:

- By inserting the memory card into a card reader
- By connecting the camera to a computer using the supplied USB cable.

Using a Card Reader

1: Eject the memory card from the camcorder and insert it into a card reader that is connected to a computer.

2: Open [My Computer] or [Windows Explorer] and double-click the removable disk icon that
represents the memory card.

3: Copy images from the card into a directory of your choice on the
computer's hard disk.

Connecting the Camcorder to a PC with the USB Cable

1: Connect the supplied USB cable to the computer's USB port and turn the camcorder on.

2: When connect to the computer, it will appears "Mass storage" on the screen

3: Open [My Computer] or [Windows Explorer]. A"Removable Disk" appears in the drive list. Double-click the "Removable Disk" icon to view its contents. Files stored on the camera are located in the folder named "DCIM".

4: Copy the photos or files to your computer.

- **How to use the PC Camera function**

At first you have to connect the camcorder to the

computer with the supplied USB cable. Press and hold the shutter button for a few seconds, then press the power button for a while. So an icon "PC CAM" will appear on the screen. If not, please continue to press the shutter button and press the power button as well.. Open [My Computer], there will be a file named "USB video tool". Double click the icon . The camcorder will work as the webcam.

© Woxter Technology Co., Ltd. All rights reserved. Woxter®, the Eagle Logo, iWXT®, WXT® and other Woxter ® trademarks are property of Woxter Technology Co., Ltd and are registered. All other trademarks, products and images are property of their respective owners.

www.wxtpro.com

Quick guide for using remote control (optional)

Part names

1. LED light indicator
2. Shutter button
3. Stop button
4. Power button
5. Battery slot cover
6. Battery slot lock

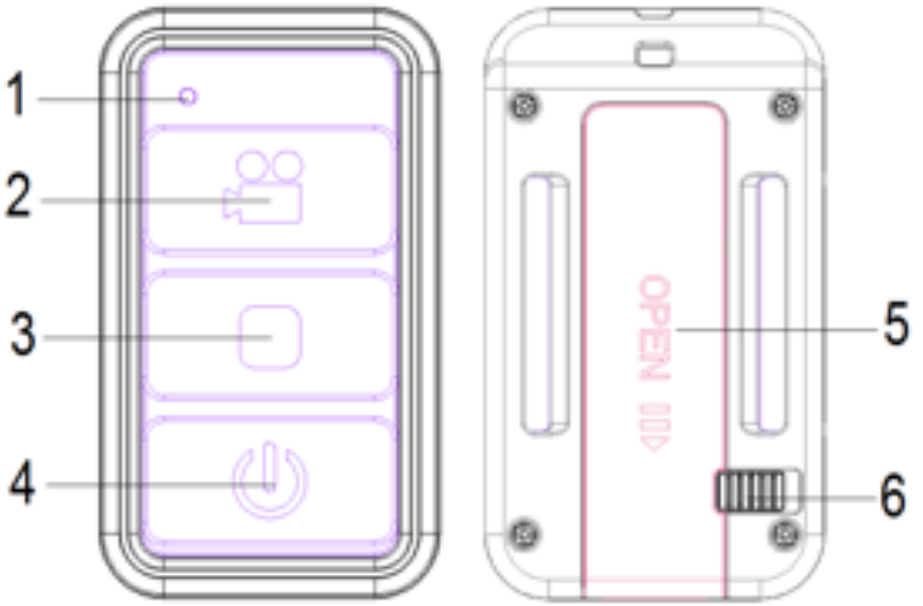

ii. Preparing

Push the battery slot lock, and open the battery department cover , then insert a battery (1.5V, AAA) into the battery slot. Please pay attention to the (+) mark on the battery for proper functioning.

iii. Operating

Turn on the camcorder, now you can use the remote controller to control the camcorder in video mode.

- ➢ Press the shutter button to start recording, the LED light will flash.
- ➢ Press the stop button to stop recording, the LED light keep blue. The camcorder will stop recording automatically when the memory capacity is full.
- ➢ Press the power button to stop recording, and the screen will turn black, press the shutter button to recovery.

NOTE: Please allow 3 sec delay time after press these buttons, for smooth recording mode please do not press the button too frequently.

iv. Powering off

When battery is low, the camcorder will turn off, and LED light of the remote controller will flash fast then turn off

Specification

Sensor	5MegaPixels CMOS
LCD display	2.0" TFT touch screen
Lens	F/3.2 , f=7.5mm
Shutter	Electronic Shutter: 1/2 ~ 1/800 sec
Angle of lens	120°
Resolution	Still Image:12M (by interpolation)/8M (by interpolation)/5M/3M/2M /VGA Video:1080p/ 720p/VGA/QVGA
White balance	Auto/Daylight/Cloudy/Incandescent/Fluoresce
Exposure	-2.0 ~ +2.0EV
Continue shot	6frame/shot
ISO	Auto/100/200/400

Sharpness	Sharp/Normal/Soft
Storage	External memory: TF/MMC (Up to 32GB)
HDMI OUT	HDMI
Power source	Li-ion battery (700 mAh)
Ambient temperature	Operating: 0° C to 40° C Storage: -20 to 60° C
Microphone	Built-in
Speaker	Built-in
Dimension	71.8x46.6x31(mm)
Weight	About 75 g